 


DIGITAL CAMERA

OWNER'S MANUAL

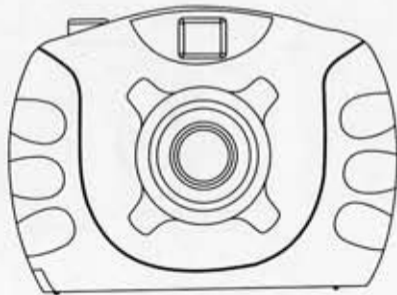

DIGITAL CAMERA MANUAL



Content

- *Digital camera
- *USB Cable
- *Installation CD-ROM
- *Owner's Manual
- *Strap

System Requirements

- *Windows 98/2000/Me/XP
- *Pentium-based PCs (or equivalent)
- *80MB hard disk free space and 32MB or more of RAM
- *Color display (24-bit or higher recommended)

Getting to know the camera

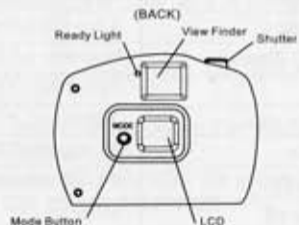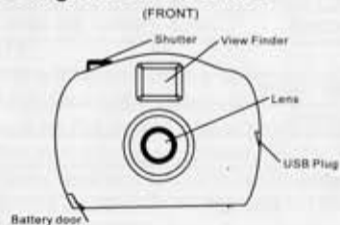

Specification

Image Sensor	CMOS Sensor 100K(352 x 288) pixels
Resolution	352 x 288 (CIF)
Memory	1M X 16 bytes SCRAM
Number of Pictures	Ld: Hi 19 CIF/Lo 76 QCIF Hd: Hi 38 CIF Lo 152 QCIF
Lens	f=3.6/F2.4
Focus Range	40 cm to Infinity
Shutter Range	1.5~ 1/2400 second
Status LCD display	Numeric LCD
Self-Timer	Timer with 10 sec delay
Video frame rate	30fps(Lo), 10fps(Hi)
Video mode	24 bits (R/G/B)
Power source	2 x 1.5V AA alkaline
Auto power off	30 sec.

PC interface	USB
Operation System	Windows 98/2000/Me/XP
Weight	Approx.80g (without 2 AA batteries)
Dimension	68(H)x98(L)x36(T)mm

Start to use camera stand along:

1. Batteries installation: On the bottom of the camera, slide the battery door in the direction indicated by the arrow to open it. Insert two AA size Alkaline batteries as +/- marking indicated on the inner side of the battery door. Close the battery door.

NOTE:

LCD will flash when the batteries in the unit are running out, you can't take photos at this time and please replace the batteries.

2. Turn on the power: Press mode button to turn on the power then operate after beep(automatic power off after idling 30 seconds).

3. Photo Taking: Press shutter button, camera will beep after the image saved, if there is no beep or "0" appears on the LCD, the memory is full.

4. Mode selection :

Hd: high density
Ld: low density

Hr: high resolution
Lr: low resolution

Hd mode: Press shutter button, camera will beep after the image saved, and number of pictures will descends after "---" appears on the LCD then beep. At this mode, 38 images can be taken in "Hr" mode; 152 images can be taken in "Lr" mode, but the LCD counter will only go up to 99, it will continue reporting 99 until there are less than 99 images left.

Ld mode: Press shutter button, camera will beep after the image saved, and number of pictures will descends. At this mode, 19 images can be taken in "Hr" mode; 76 images can be taken in "Lr" mode.

Continuous Shot: Select "CE" appears on the LCD by press mode button, you can perform continous shot by press shutter button continuously.

Self-Timer: Select "SE" appears on the LCD by press mode button, then press shutter button, it will beep every second and a picture will be taken automatically after ten seconds.

Delete Last: Select "CI" appears on the LCD by press mode button, the last image can be deleted.

Delete All: Select "CL" appears on the LCD by press mode button, press shutter button and "CL" on the LCD will flash then press shutter button again.

Mains Frequency: You can switch 50Hz or 60Hz in different zone by press mode or shutter button.

5. Power Off: Select "OF " appears on the LCD by press mode button then press shutter button. It switches off automatically when there are no operations for over 30 seconds.

6. Photo Download: You have to install the software driver first, please refer to driver installation section.

Installing Camera Driver & Snap Kids Program (For Windows 98/2000/Me/XP)

1. Insert CD into Disk Drive. Program will automatically appear on your screen.
2. Click on buttons to install Camera Driver and Snap Kids editing program.
3. After you install these programs, you will need to restart your computer. When restarted, look for the Snap Kids icon on your desktop.

Take Pictures with Digital Camera

Downloading Pictures from Camera to Computer

1. Connect camera to computer's USB port using the USB cable.
2. Open Snap Kids program on your desktop.



3. In the Library screen click **"Download photos from camera"** The downloading screen will appear.
4. Send your photos to a folder on your computer.
Top Dialog Box By default photos go to the destination folder listed here.
Lower Dialog Box Option You can also choose to create a sub-folder within the destination folder to store your photos.
5. Click the green download button.
6. A **"Select Source"** dialog box will appear.
7. Click **"Dual-Mode DSC (2770)"** and click **"Select"**.
8. The blue MyDSC interface will appear.
9. Click the 1" round pink button "Download photos" button.



10. After the photos are downloaded, click the photos you would like to transfer to Snap Kids. You can click them individually or use the "select all photos in this page" (small round button with yellow page icon).
11. After selecting the photos you want to transfer, click the transfer photos (2" large round button with arrow and photo icon).
12. Selected photos will be saved to the destination folder and imported into Snap Kids.
13. To view your saved photos in Snap Kids's Photo Library, click the **"Category"** box (bottom left corner). Click any folder to see your saved photos.
14. To delete a photo, first select the photo and click the red **"Remove"** box Photo Library Find all your downloaded photos here.

Edit Center Click on a photo in the Photo Library. Go to the Edit Center and use

any of the 18 editing tools to enhance this photo. Click Save New (top right corner) to save your edited photo.

Print Center Make print choices to meet a variety of needs, i.e. printing, sending email photos or posting photos on a web site. There is a preview function. Users can use the Print Center to export photos to other folders.

Slide Show Choose a folder of photos (bottom left side) for your slide show. You can manually go through the slide show or set it on autoplay. There are 3 choices for deciding how much time to play each photo. Change background color by clicking the color pallet. For continual play select the loop option.

Story Maker Type in Title and Author on left side of page. Choose a photo for the story from one of your photo folders. At top of page choose a story template from 12 different themes. Write your story in the story text box. Preview your story. Click Export to save your story. Choose an export format depending on whether you wish to print, post or email your story.

Game Center Play five challenging games with your photos. For help in playing each game click its How To Play button.

NOTE:

The transfer interface for this product is USB Revision 1.1.

DO NOT

- Open the battery door or remove the batteries from the camera until after the photos have been downloaded. The photos will be lost from the memory when there is a power loss.
- Expose the batteries to high temperature environments or dispose of batteries into fire. The batteries can explode and cause damage incurred.
- Mix old and new batteries in the digital camera.
- Drop or bump the camera.
- Put it under water or exposed to rain.
- Put it high or low temperature, or in humid environment.
- Put it in strong shock environment.

Maintenance of Digital camera

The digital camera is an accurate device, please preserve and use it properly to avoid damage to it.